

AGH5BL Self-Closing Aluminum Fence Gate Hinge Pair - Instruction Manual

TO ADJUST SPRING TENSION, HOLD THE HEX HEAD NUT WITH A WRENCH WHILE LOOSENING THE SET SCREW. TURN THE HEX HEAD NUT TO ADJUST TENSION, CLOCKWISE TO INCREASE TENSION, COUNTER-CLOCKWISE TO REDUCE TENSION. ONCE DESIRED TENSION IS SET, TIGHTEN THE SET SCREW AND REPLACE THE END CAPS.

